





MİMOZA ADA 120 CM

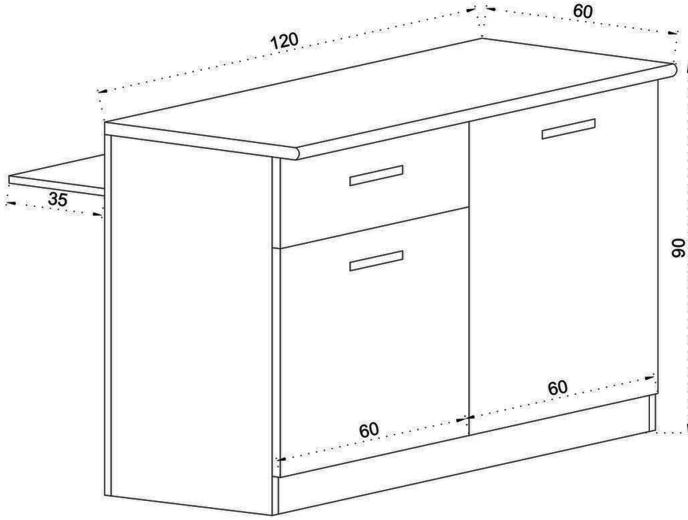

HAND TOOLS REQUIRED FOR INSTALLATION




ACCESSORIES LIST

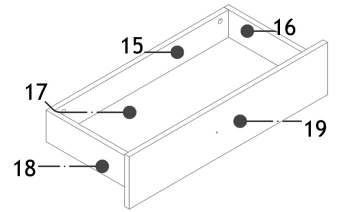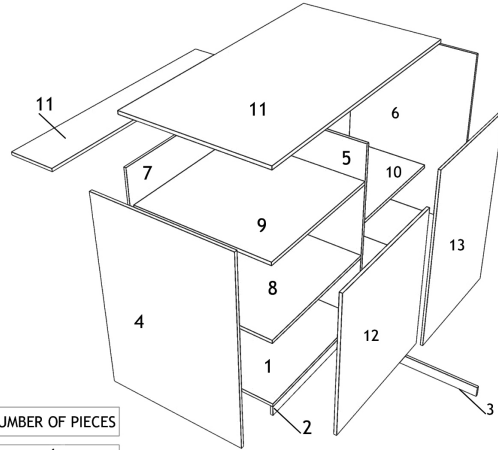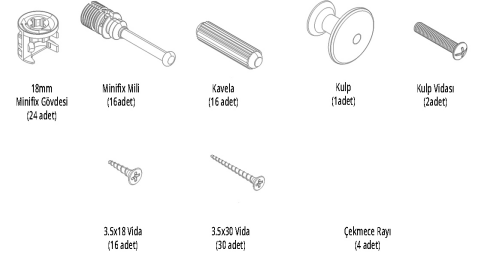

PART NUMBER	PART NAME	NUMBER OF PIECES
1	Bottom Table	1
2	Lower crown	1
3	Support piece	1
4	Left side piece	1
5	Middle piece	1
6	Right side piece	1
7	Backrest	1
8	Shelf	
9	Shelf	
10	Shelf	1
11	Top panel	1
12	Left short cover	
13	Right cover	
14	Stand	1
15	Backrest	
16	Left piece	1
17	Base	1
18	Right piece	
19	Cover	

1-


*You must start the installation with part number 1.

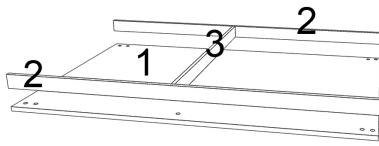

*Install parts 2, 3 to the number 1 sub-panel.

* Turn the module over.


5-

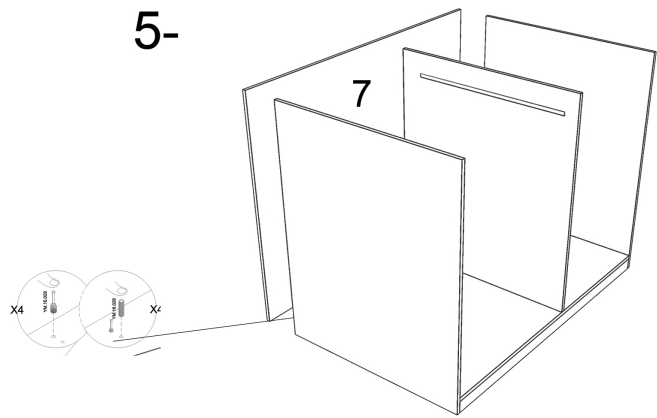

* Attach the backrest.

2-


*The drawer rail must be installed before the right and middle panels are attached.

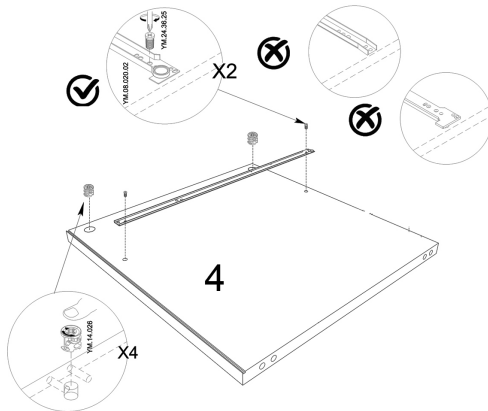


* Lay down the left side panel number 4 on the ground.

* Lay down the left side panel number 5 on the ground.

6-

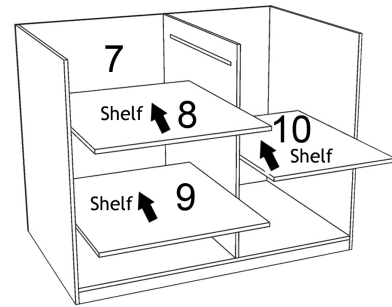


7-

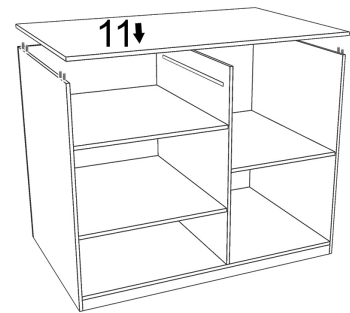


- Top panel number 11 should be installed as shown in the figure.

3-

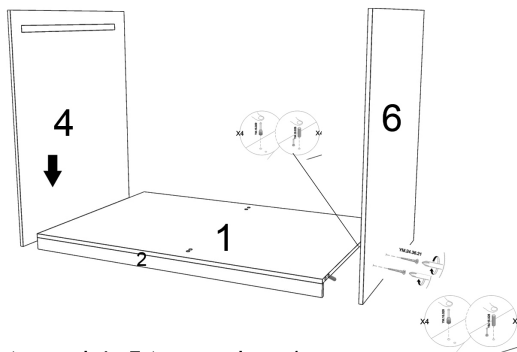


- Connect panel 4 -5 to panel no 1.

8-

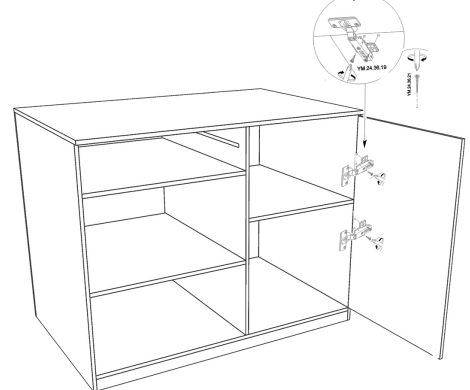


*Install the hinges of the right cover.

4-

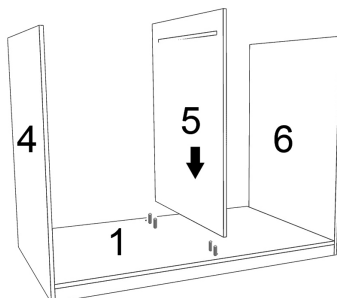


*The middle shelf must be attached to the right upright no. 5 and the middle upright as shown in the figure.

9-

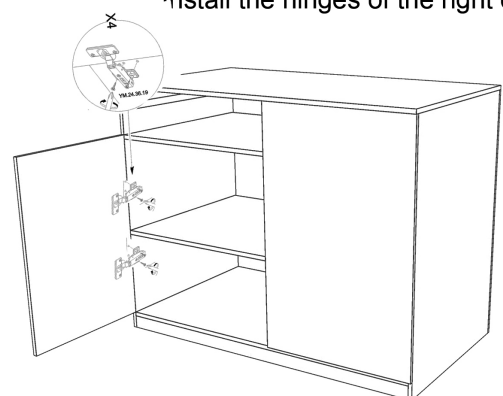


*Install the hinges of the left cover.


10-

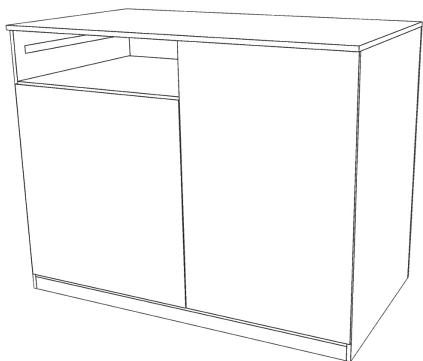

11-X2

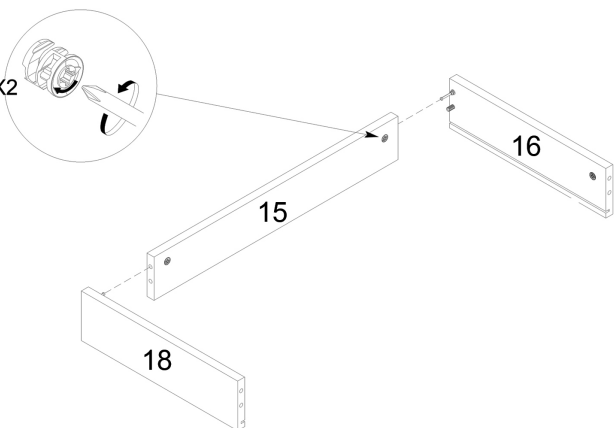


12-

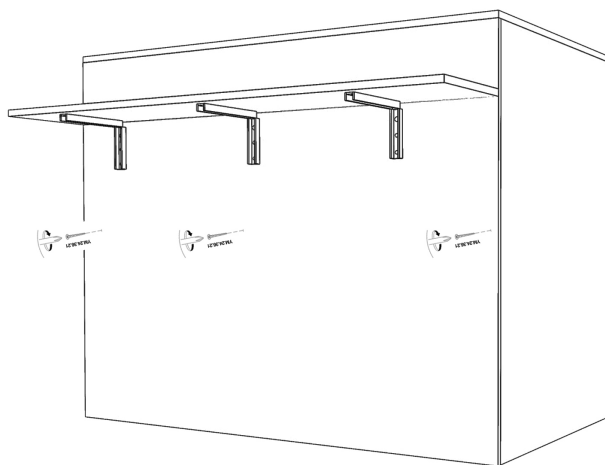


* Screw the L profile you have attached to the backrest as shown in the figure.

13-

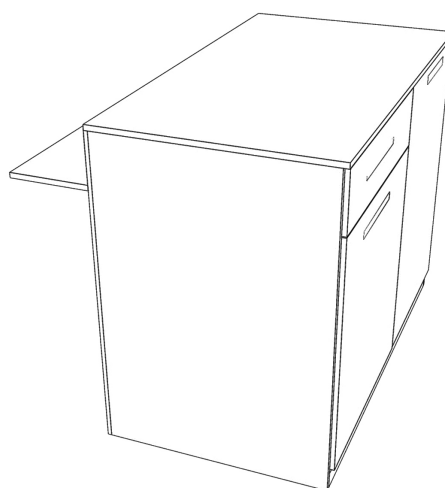

12-

Turn over the part number 11 and attach the L profile.

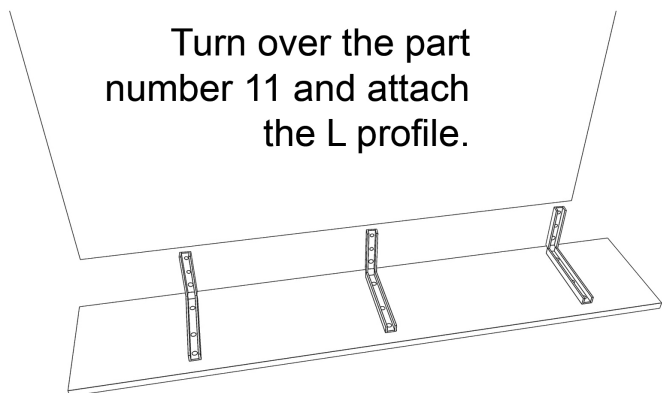

You have completed the product installation.