












# HENRY TWO-DOOR PORTMAN

## MATERIAL REQUIRED FOR INSTALLATION

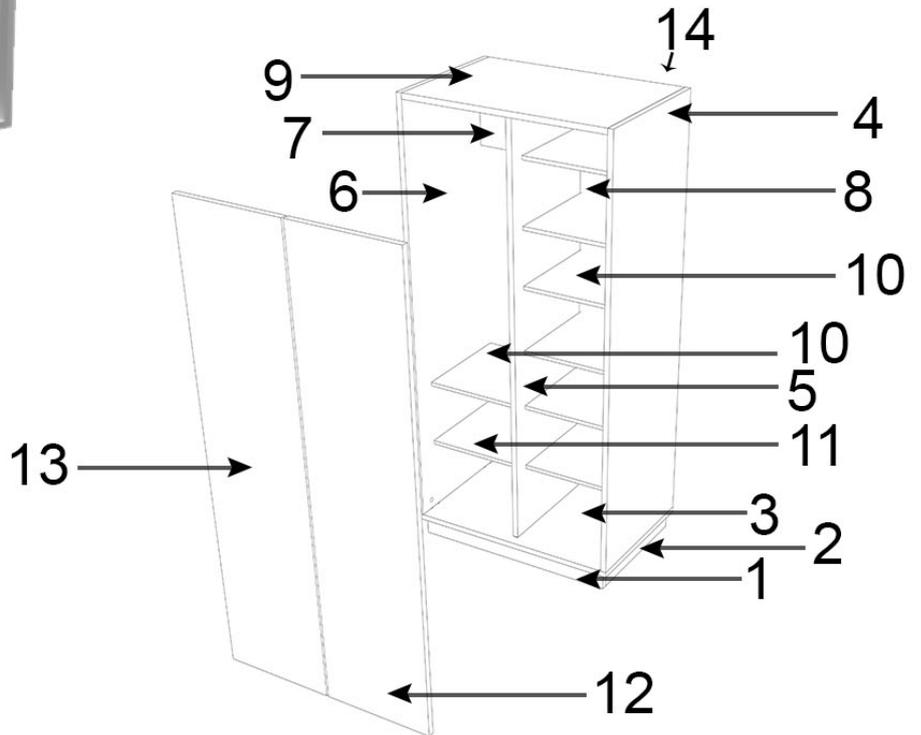


## ACCESSORIES LIST

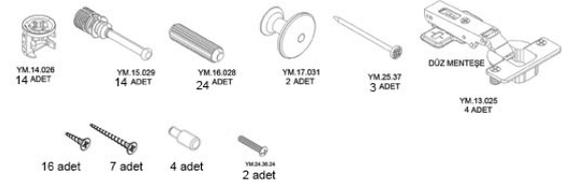

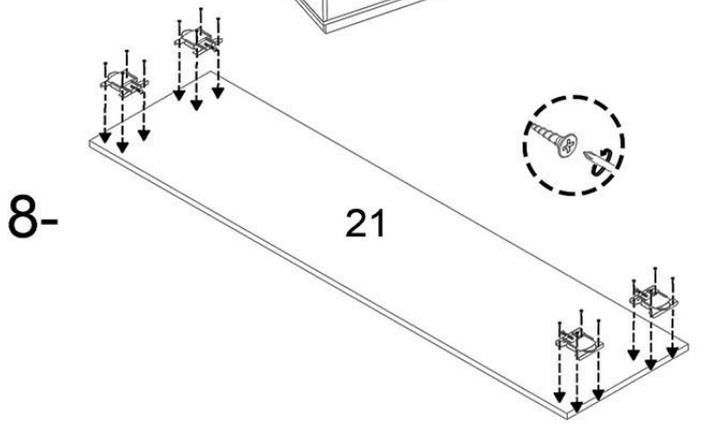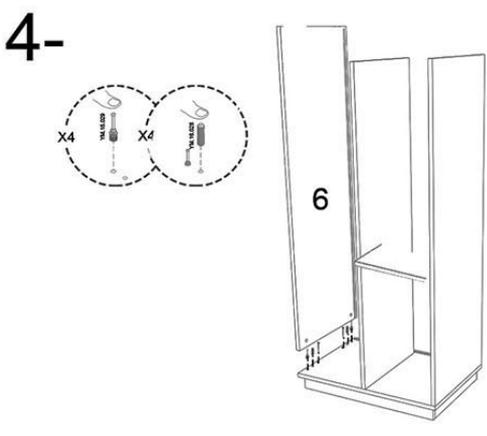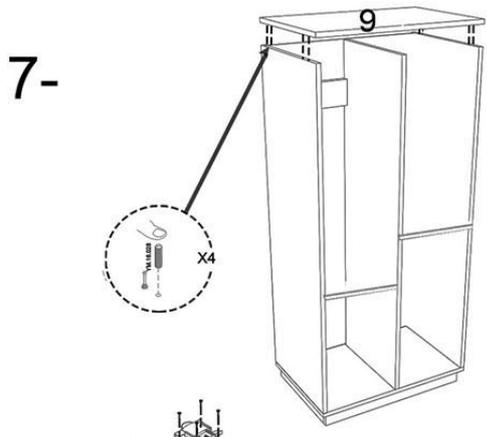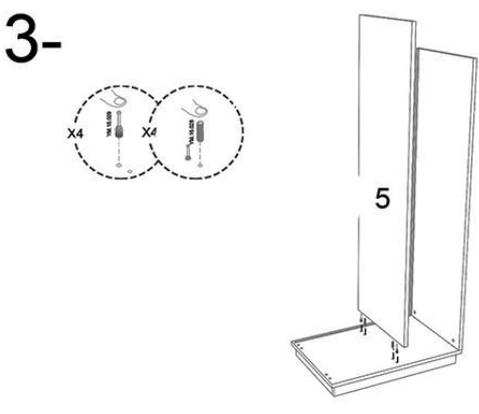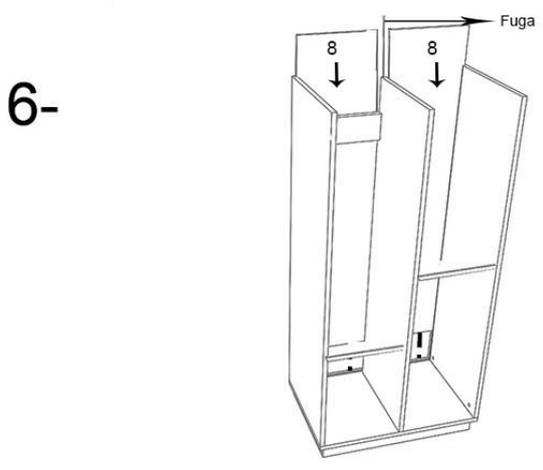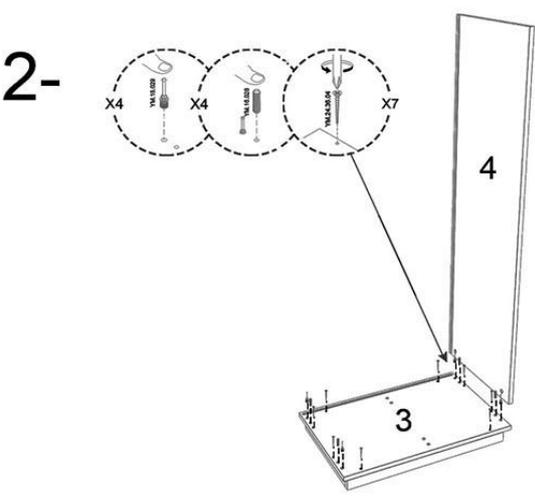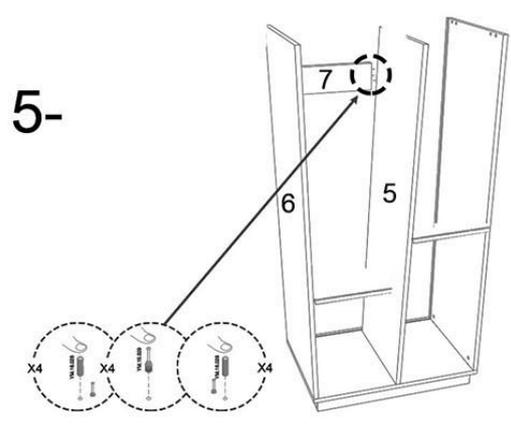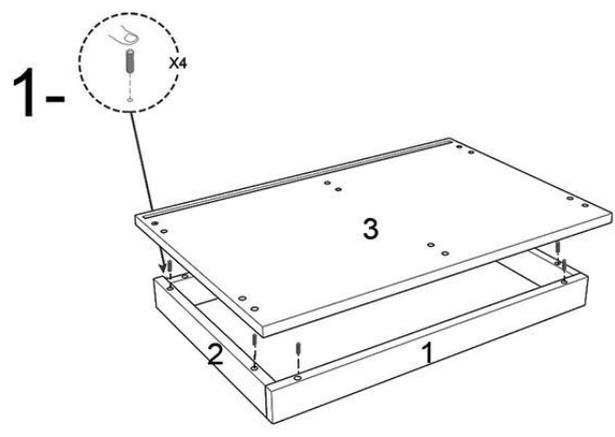


9-

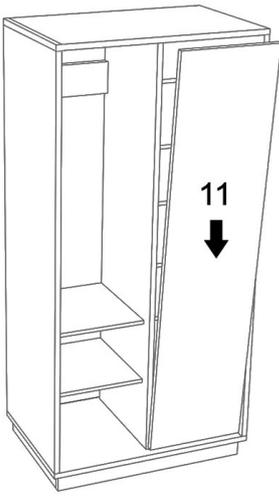


Note: Covers should be attached from the bottom as shown in the picture first.

10-

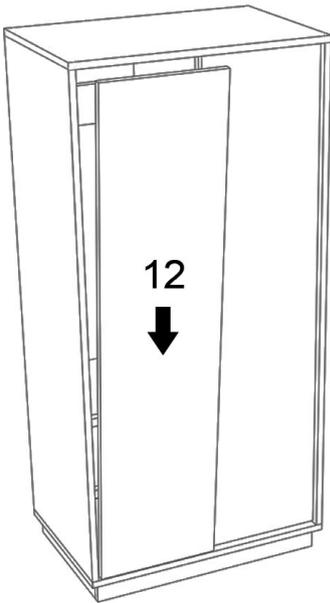

Note: After the covers are installed, the movable shelves must be installed. The handles must be installed last.

11-

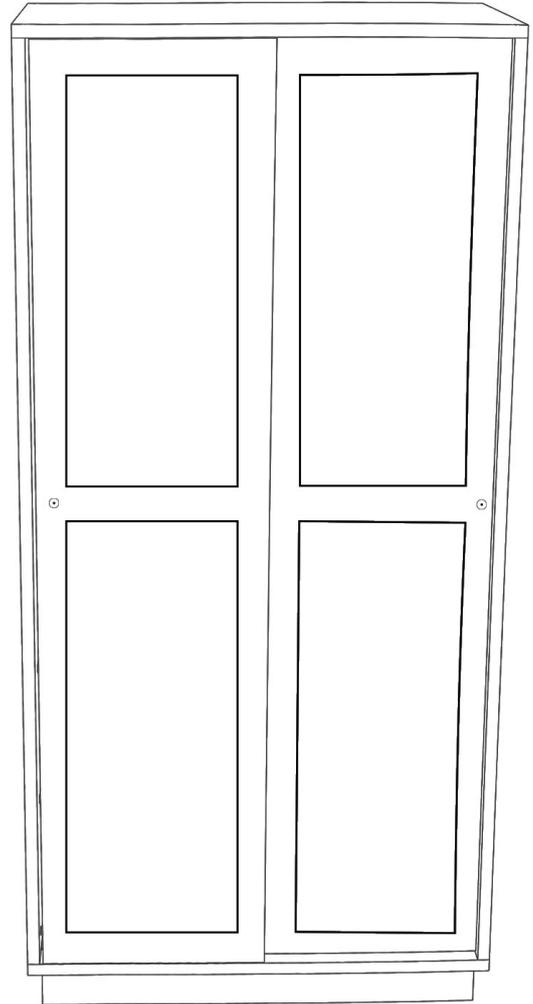

YOU HAVE COMPLETED THE PRODUCT INSTALLATION.