





SIDE








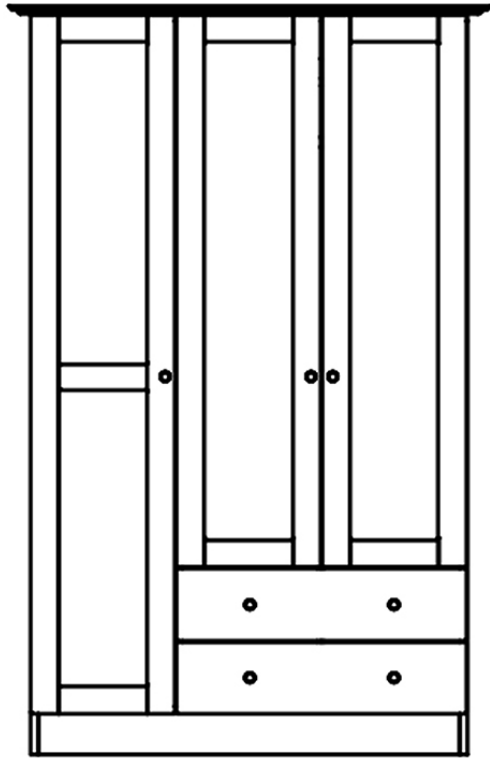










HAND TOOLS REQUIRED FOR INSTALLATION

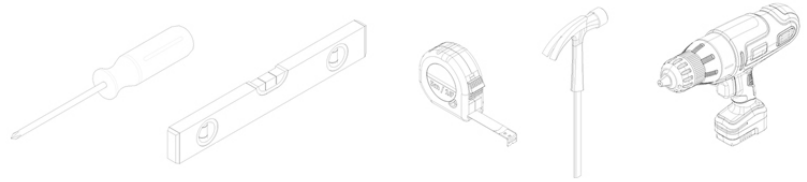


ACCESSORIES LIST

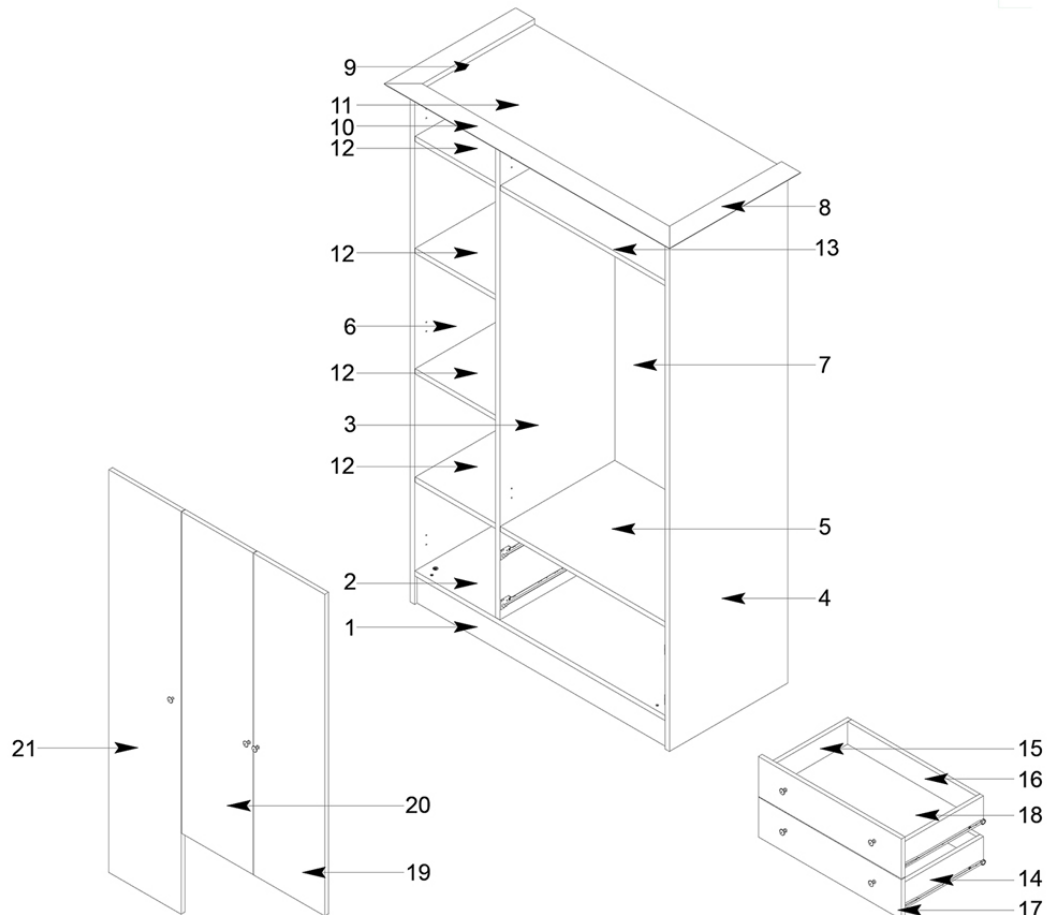
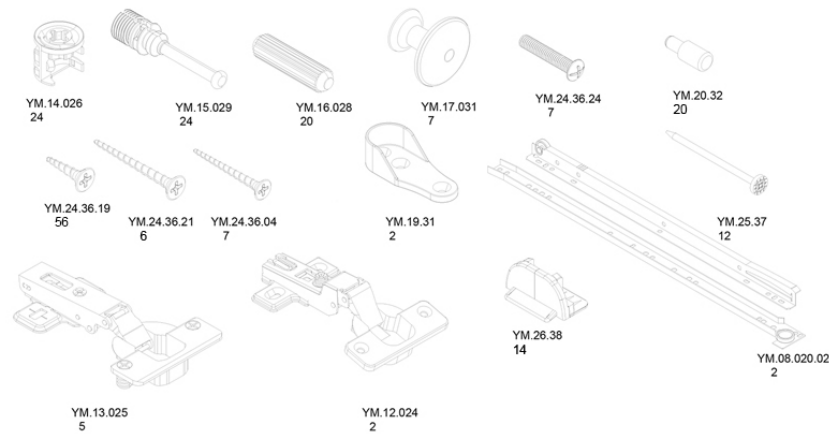


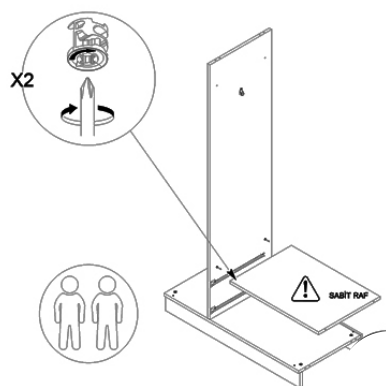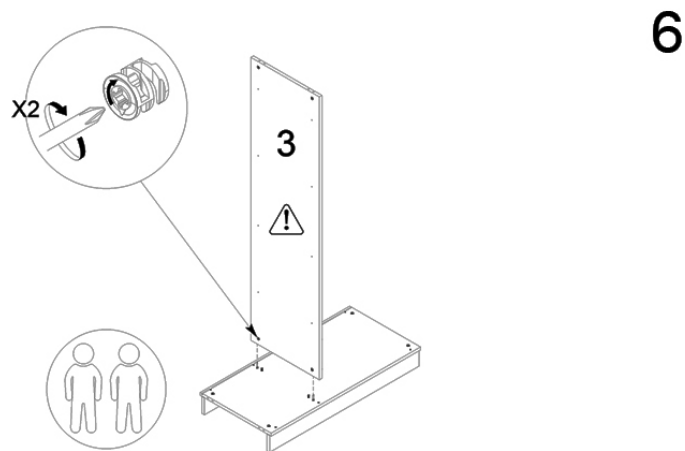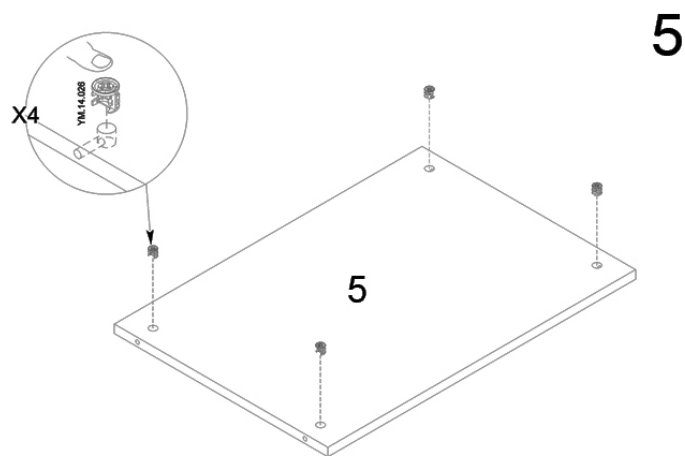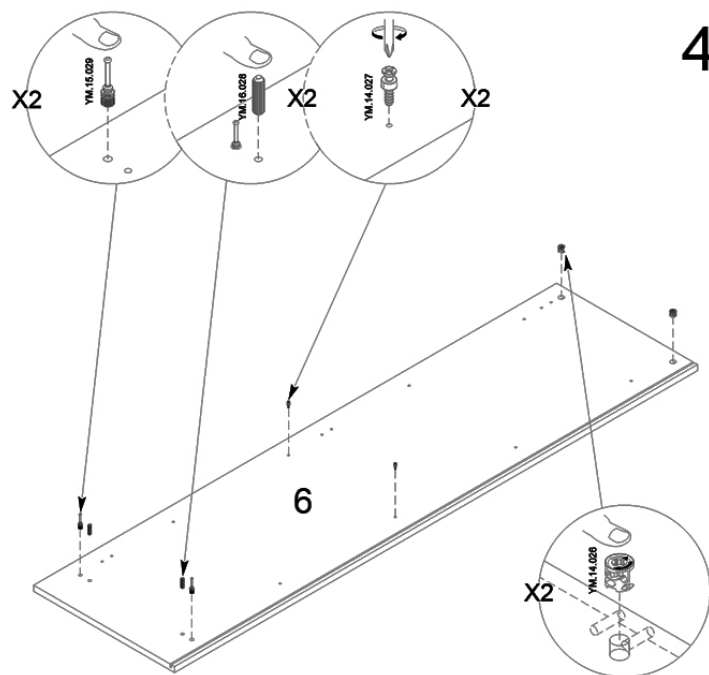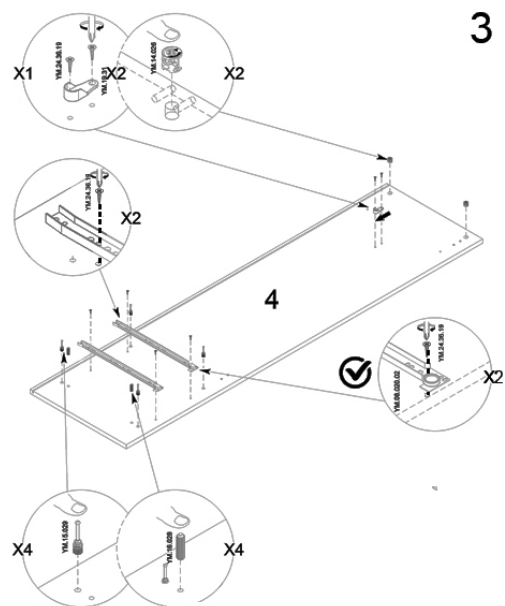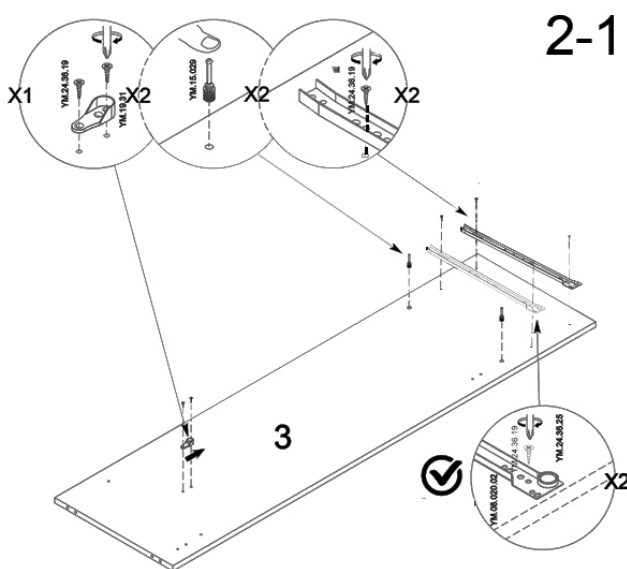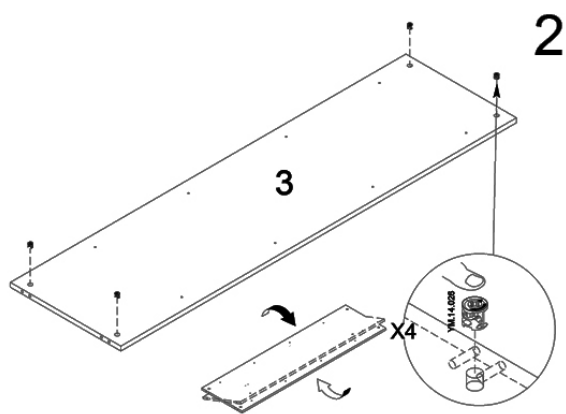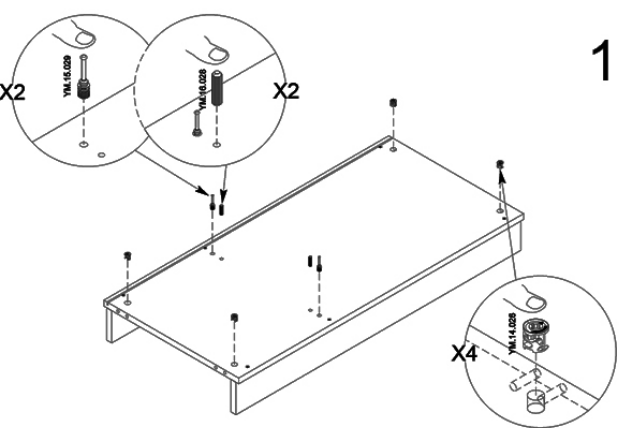

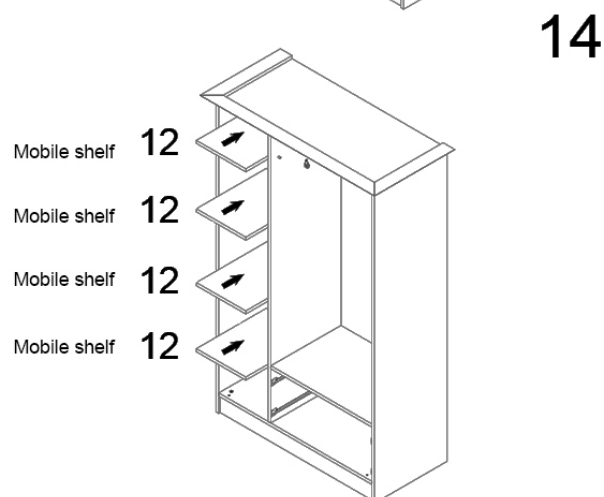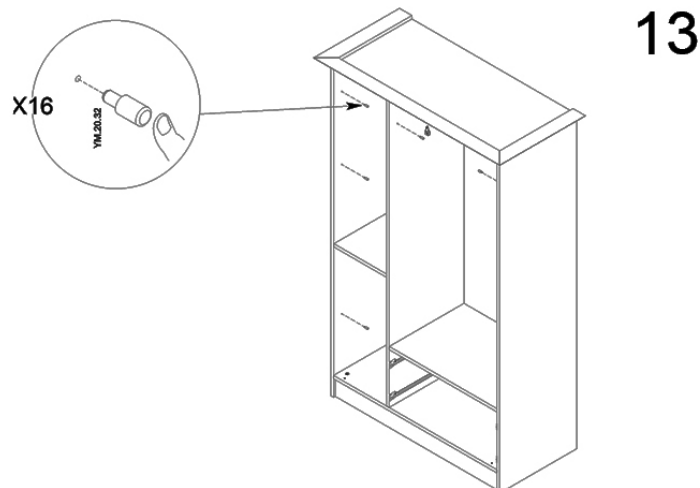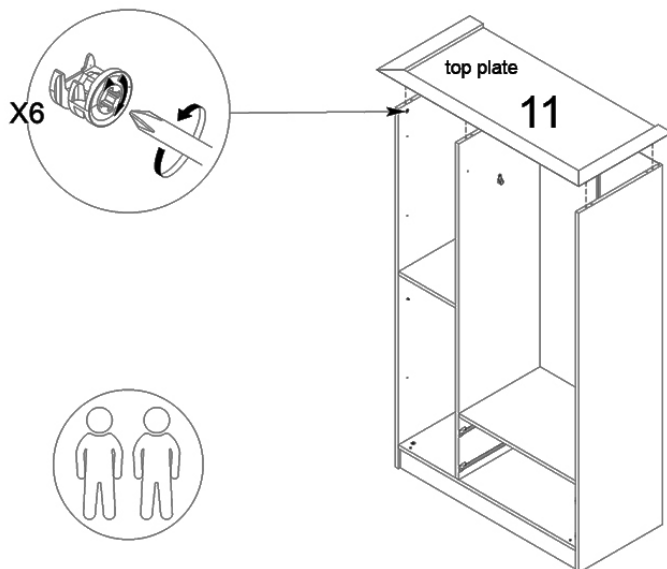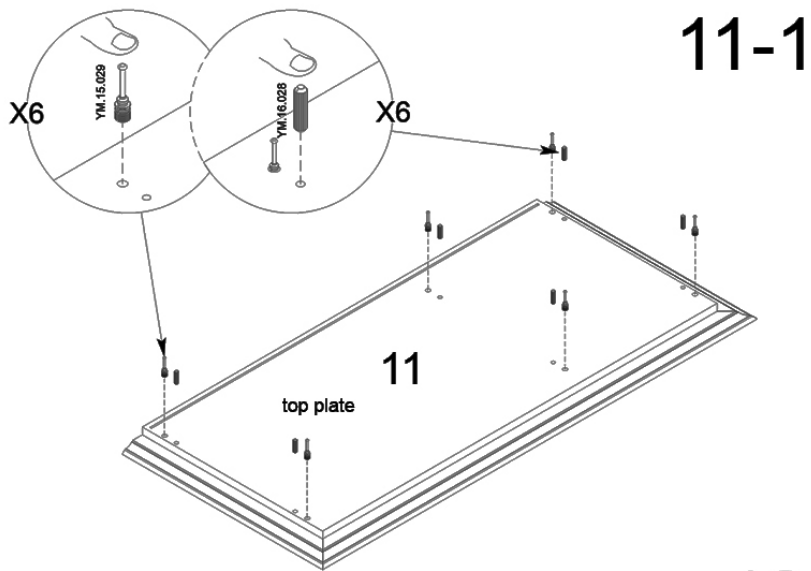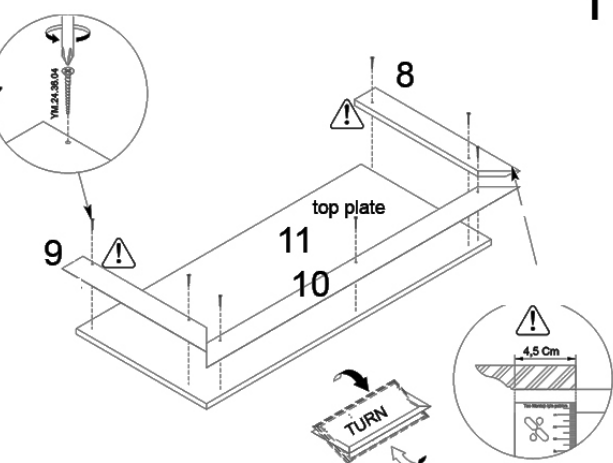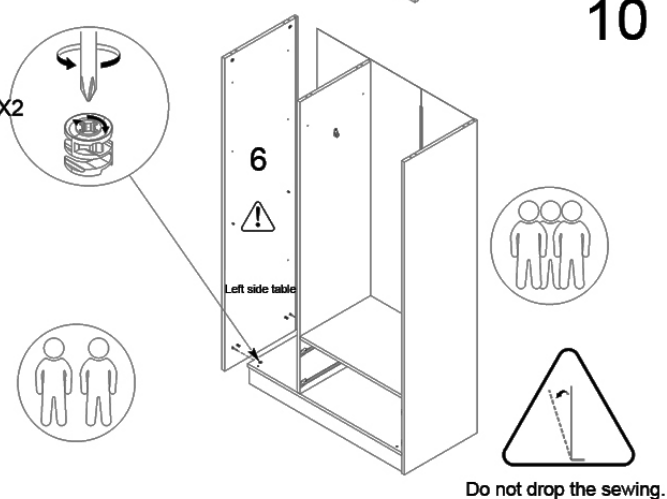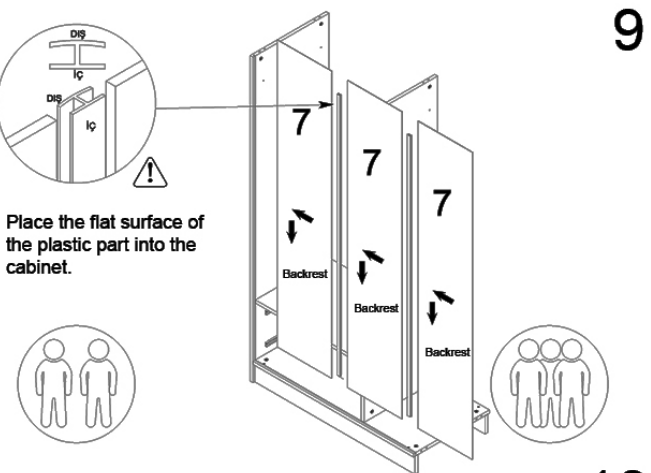
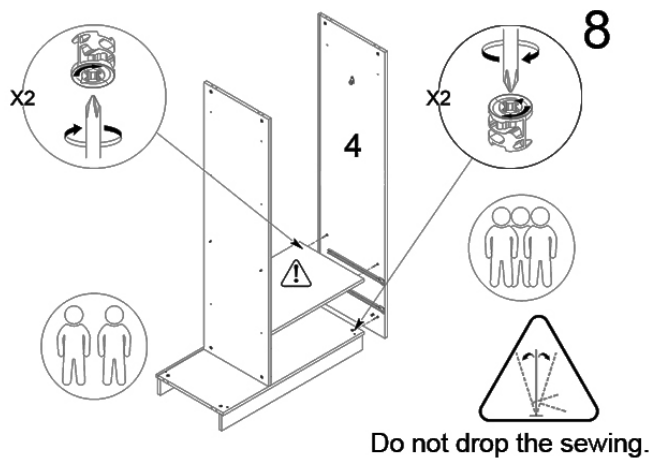


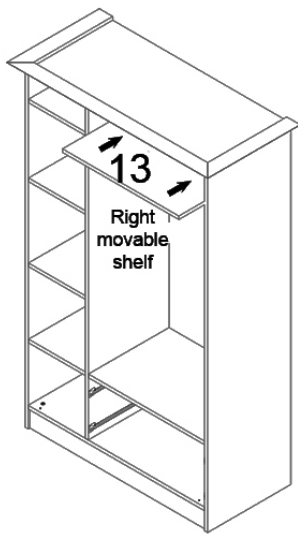



15

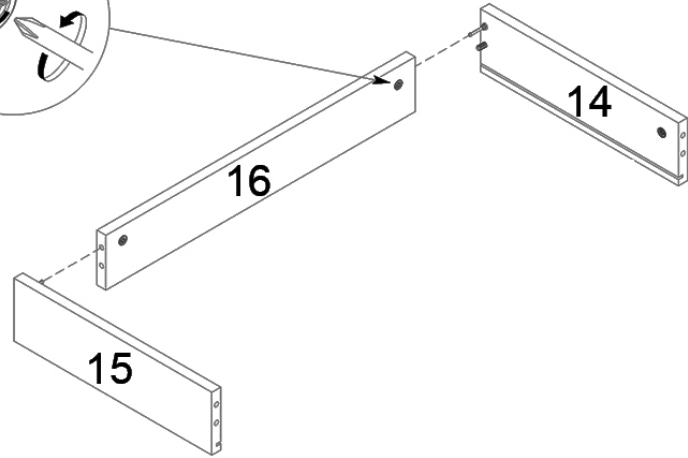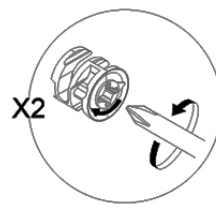


19

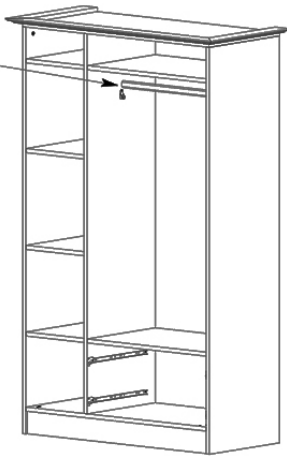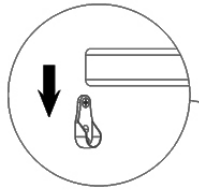


16

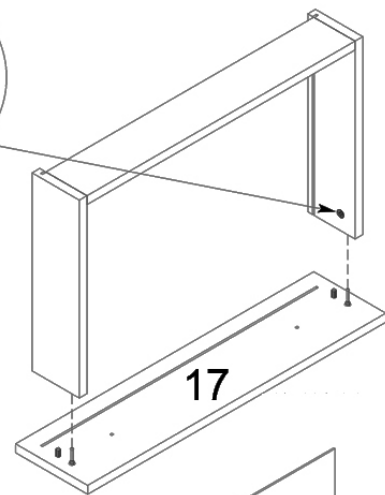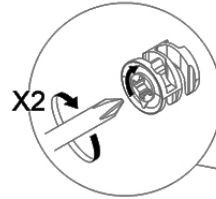


20

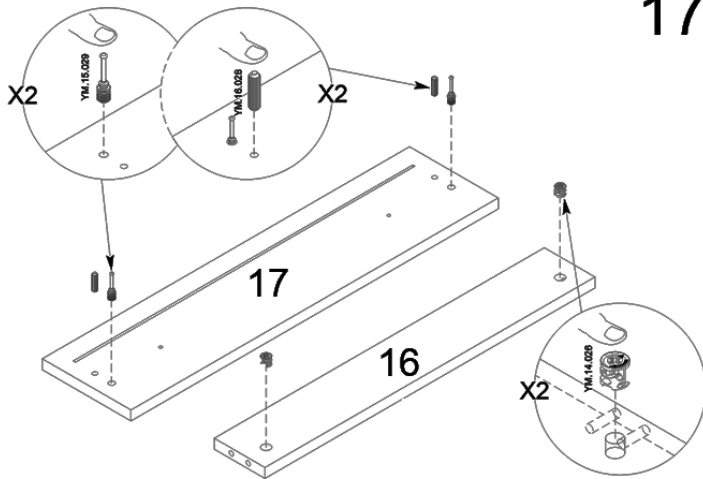


17

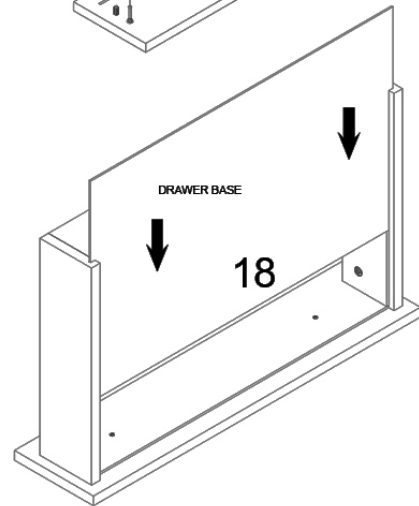


21






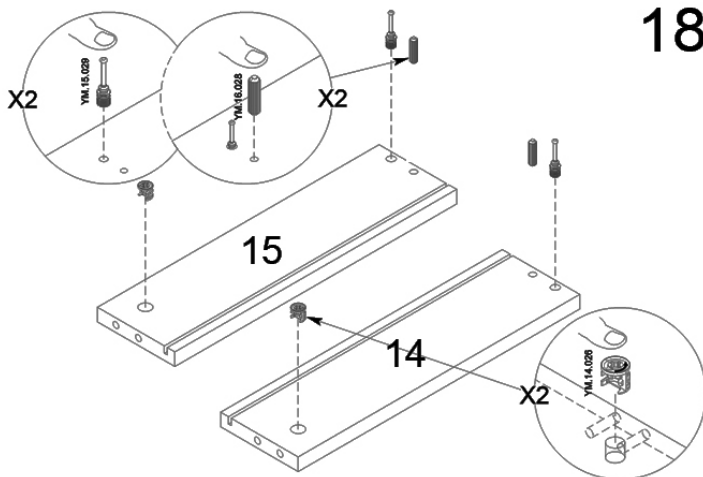



18

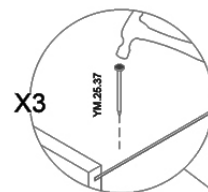


22

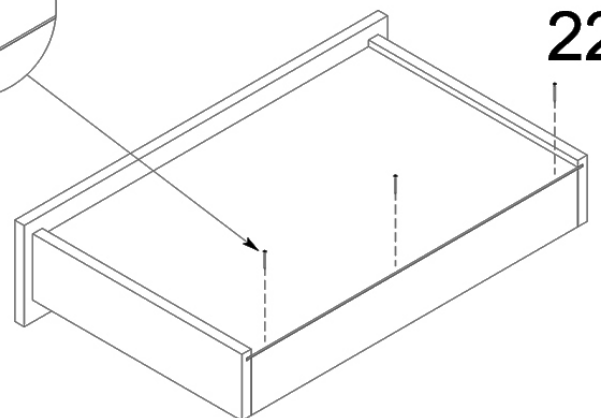

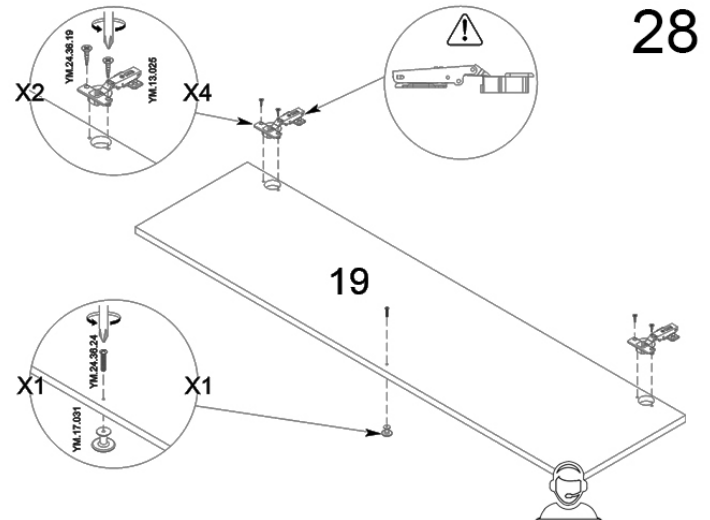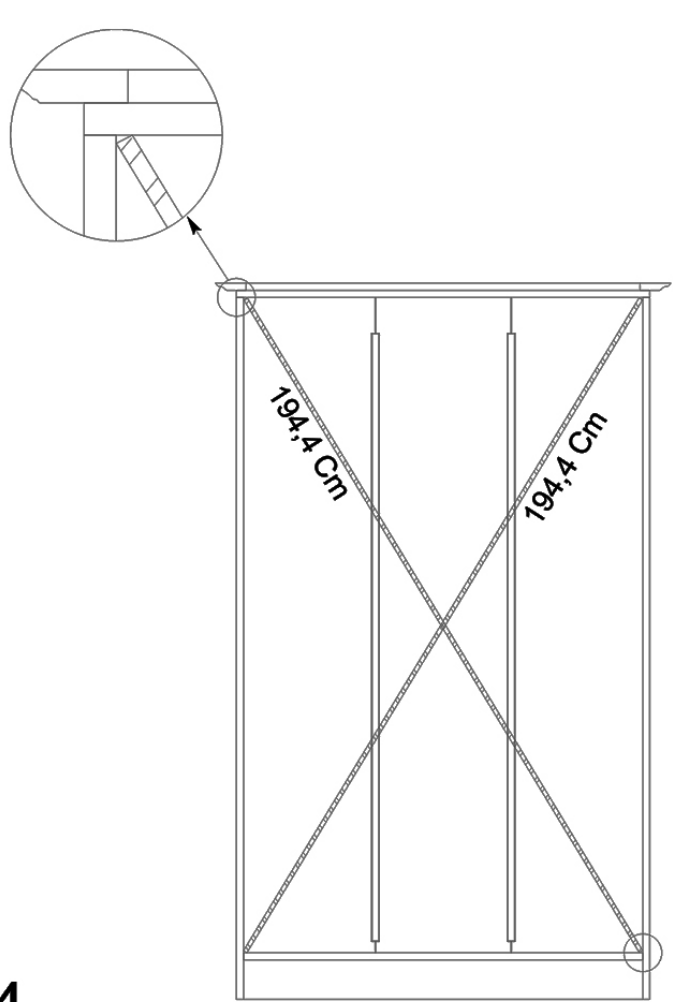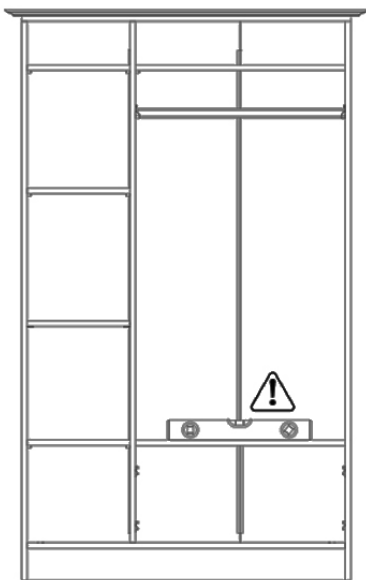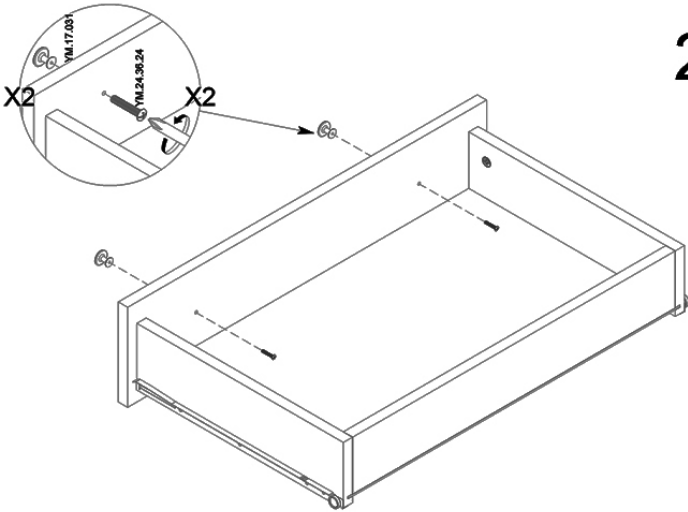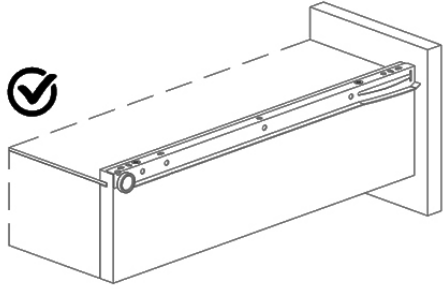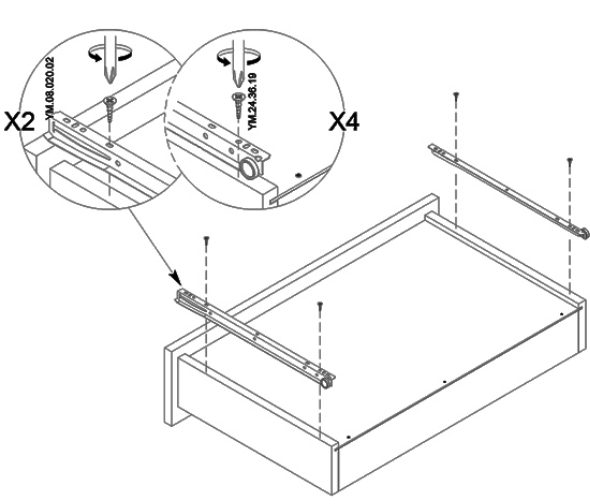


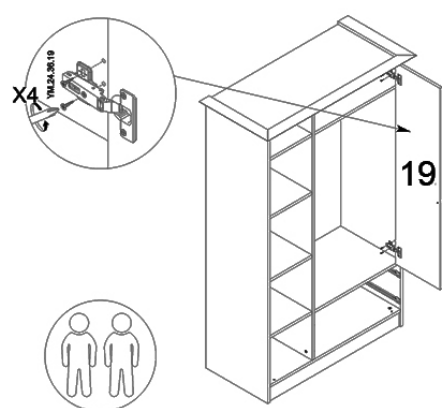

28-2

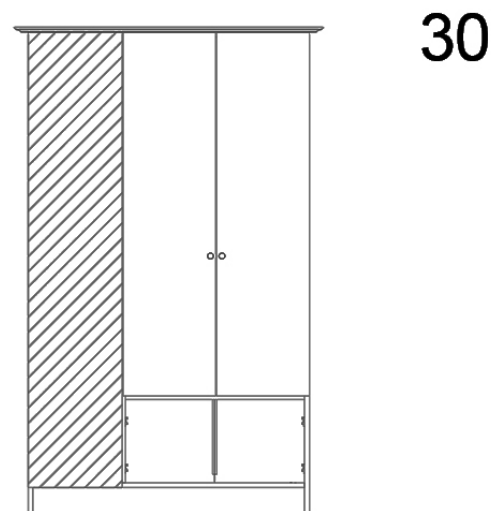


30

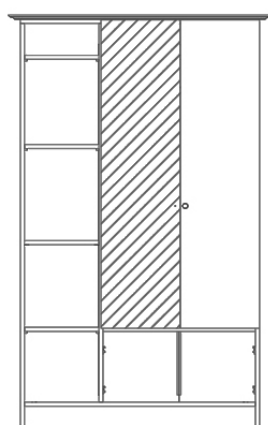


29


30-1

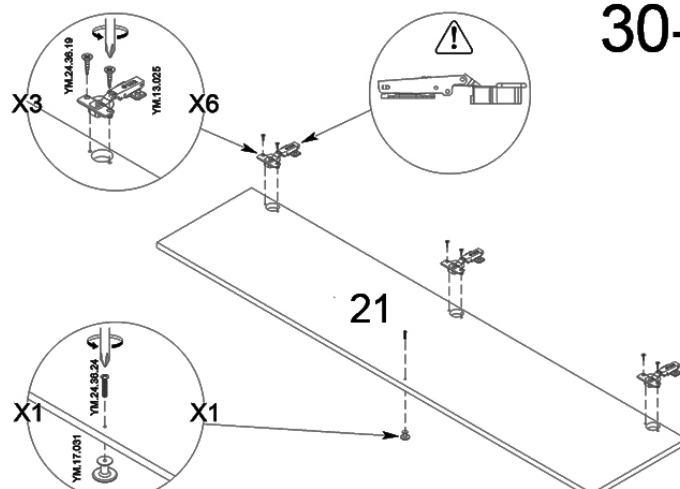



29-1

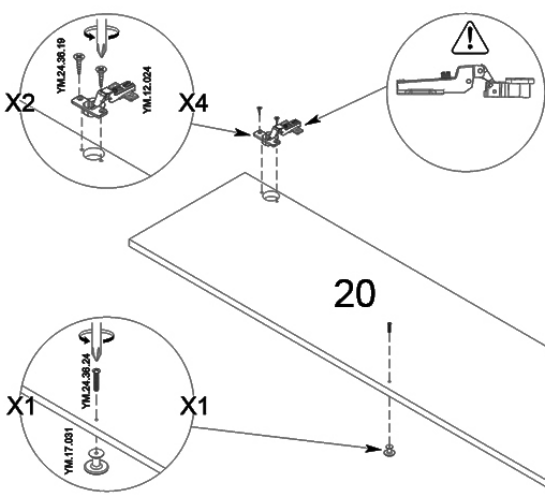

30-2

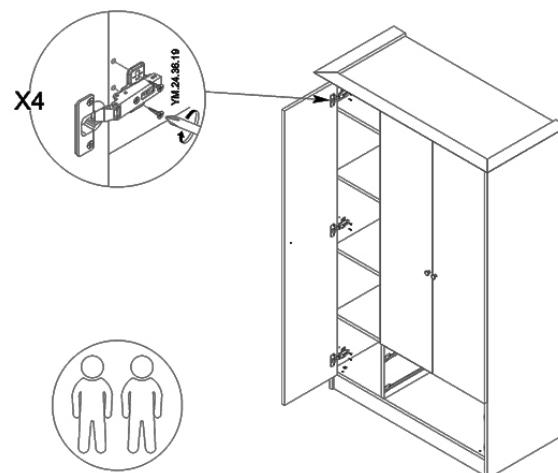

29-2

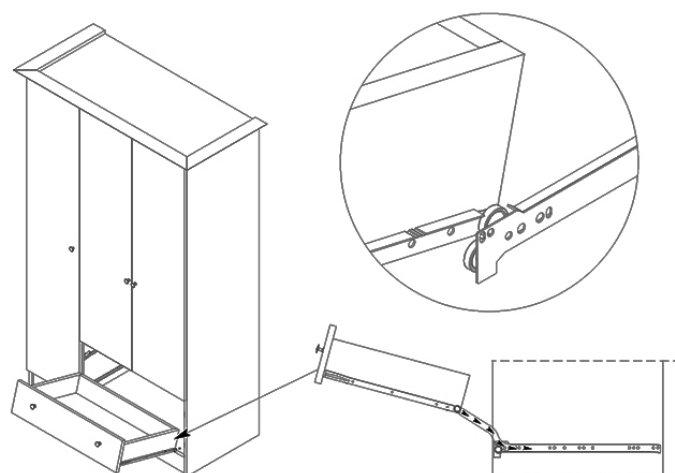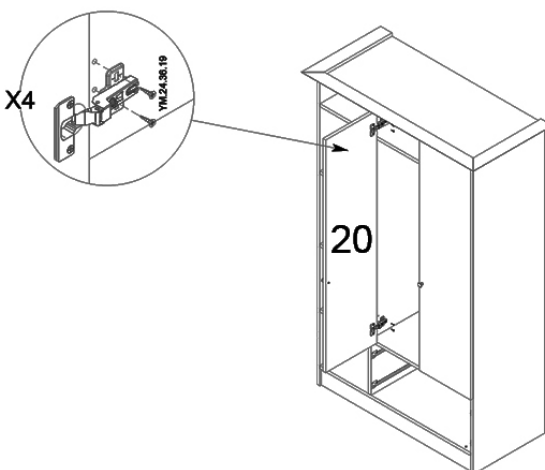

WE HAVE COMPLETED THE PRODUCT INSTALLATION.